


CANconnect USB Dongle Driver Installation Guide

10/8/2010


1. To install the 514UTC USB drivers, please make sure that your computer is disconnected from the internet first. This will prevent Windows from trying to install their own drivers for the device.
2. Connect the device to your USB port. The "Found New Hardware Wizard" appears.
3. If Windows asks, "Can Windows connect to Windows Update to search for software?" select "No, not this time," and click "Next."



4. Select "Install from a list or specific location (Advanced)" as shown below and then click "Next."

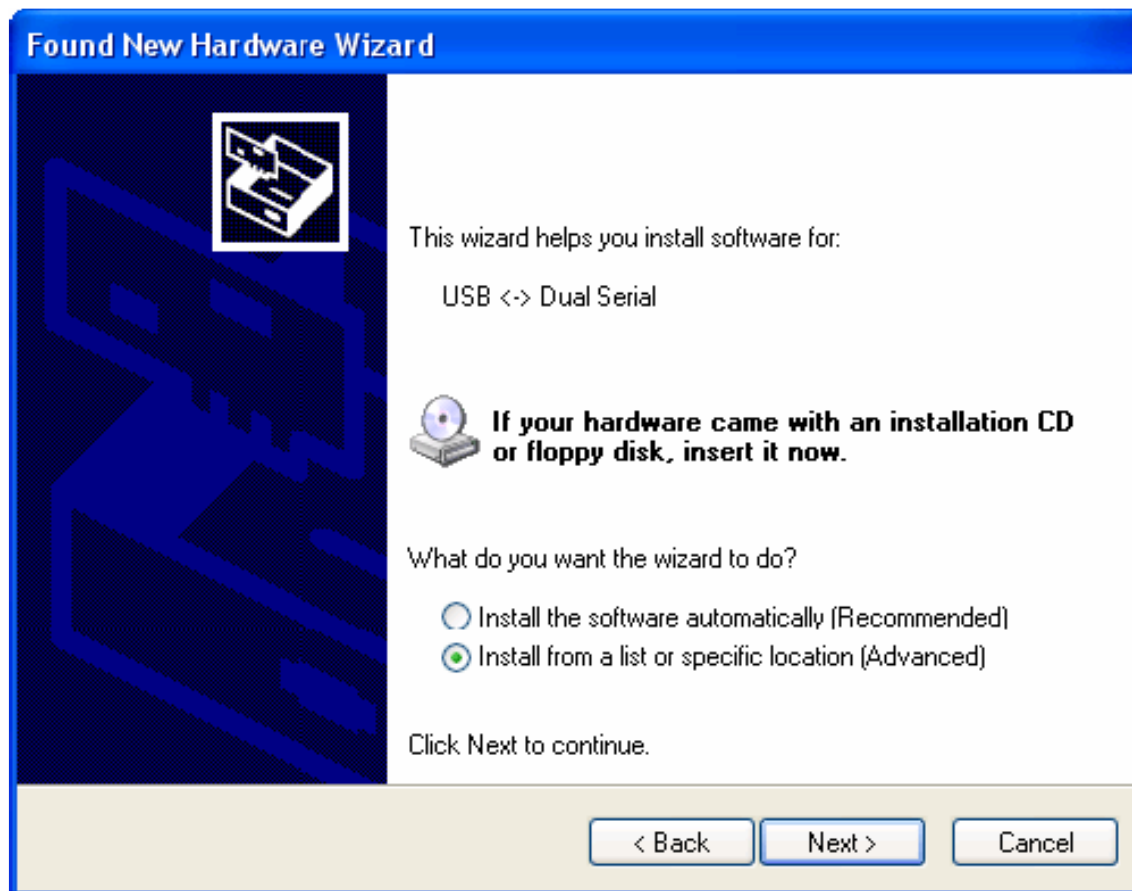

5. Select "Search for the best driver in these locations" and enter the file path in the combo-box ("C:\Program Files\CANcreate\514UTC Drivers" in the example below) or browse to it by clicking the browse button. Once the file path has been entered in the box, click next to proceed.

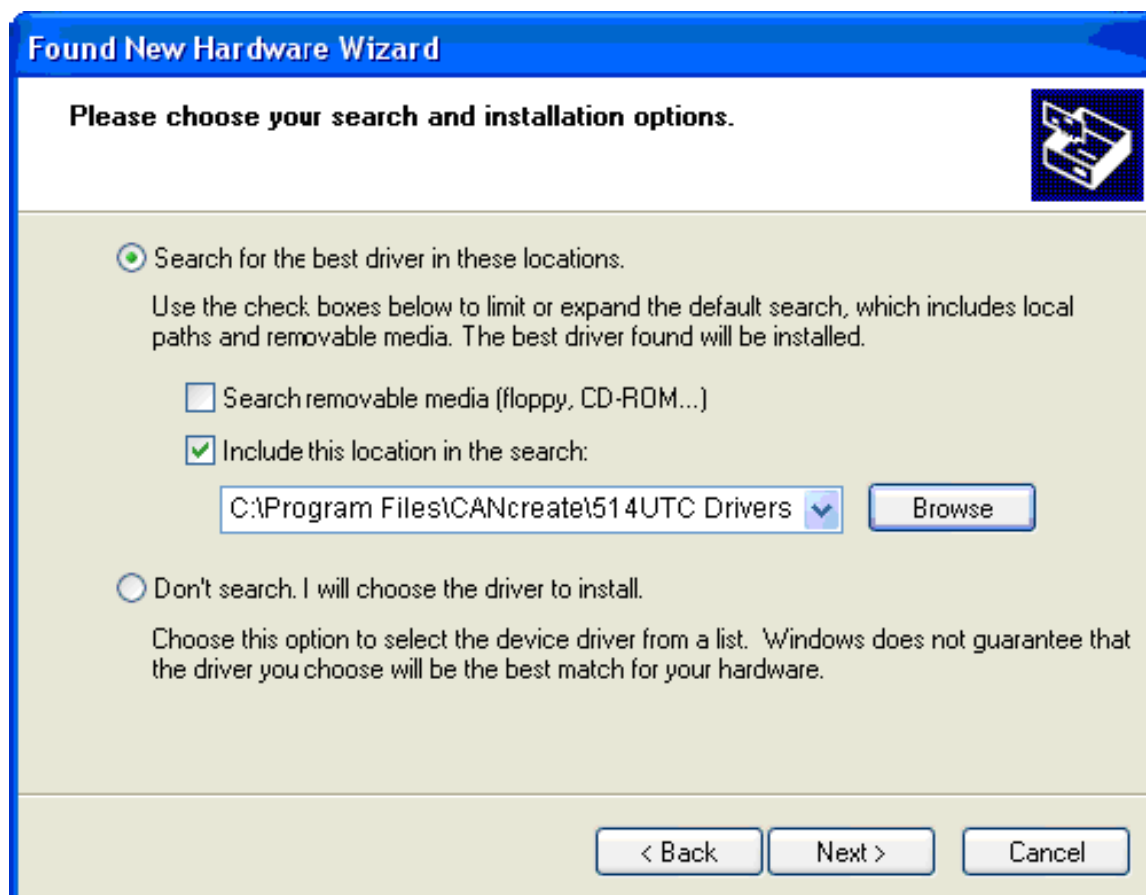


6. If Windows XP is configured to warn when unsigned (non-WHQL certified) drivers are about to be installed, the following screen will be displayed. Click on "Continue Anyway" to continue with the installation. If Windows XP is configured to ignore file signature warnings, no message will appear.



7. The following screen will be displayed as Windows XP copies the required driver files.



7. Windows should then display a message indicating that the installation was successful. Click "Finish" to complete the installation. The device is now ready for use.

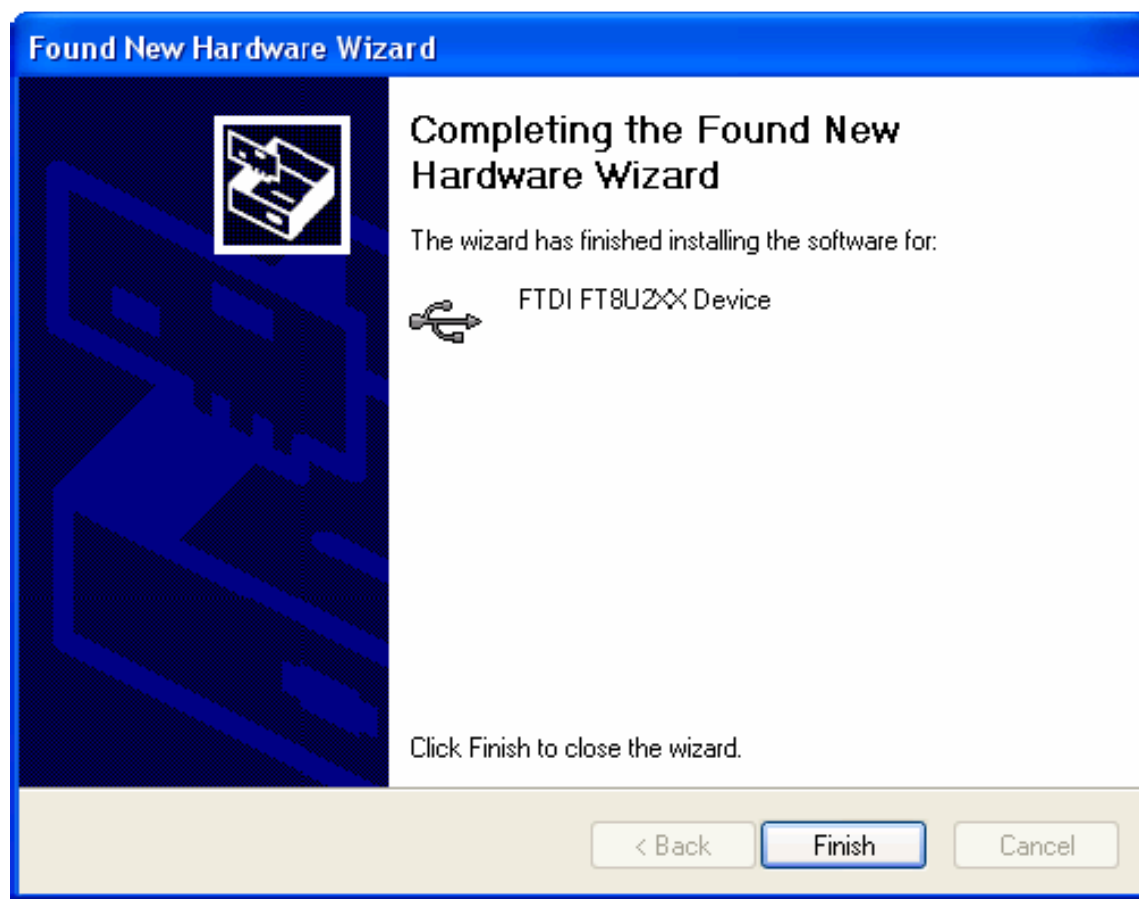

8. On the CANconnect main window, go to the options menu, and click on "Connect Using 514UTC."