

POWERKEY ULTIMATE

ORDERING GUIDE

HOW TO ORDER

Build your ultimate human machine interface device by following the simple part numbering template below and selecting the desired PowerKey Ultimate model and features. Detailed descriptions for each of the feature and accessory offerings can be found at www.hmismsystems.net

NOTE: PowerKey Ultimate requires all controlled devices be powered with a distributed communication system. If you have any questions, please contact your nearest support center found on the back of this brochure.

Keypad Series	Rows	Columns	Description	Size	Communications Protocol	Connector	Add-On Buttons
PKU Powerkey Ultimate	2	2	2200 - Four Position Keypad	Available in Large Button (Blank) or Mini (M)	1 J1939	0 Deutsch	0 Yes (Deutsch)
	2	4	2400 - Eight Position Keypad		2 CANopen	1 Flying Leads	1 None
	1	5	1500 - Five Position Keypad	3 RS-485	2 Molex	2 Yes (Flying Leads)	
	1	8	1800 - Eight Position Keypad	4 NMEA2000	3 M12	3 Yes (Custom)	
	2	3	2300 - Six Position Keypad	5 J1939 & RS-485	X Custom		
	2	6	2600 - Twelve Position Keypad	6 (DSS PKP Style)			
	2	8	2800 - Sixteen Position Keypad	7 Application Specific Firmware			
	3	5	3500 - Fifteen Position Keypad	X Development			

REV 9.28.20

1955 West State Rd 426 | Oviedo, FL 32765 | Tel: 407.359.8171 | Fax: 407.359.8170
info@hmismsystems.net | www.hmismsystems.net