

POWERKEY ULTIMATE

ORDERING GUIDE

HOW TO ORDER

Build your ultimate human machine interface device by following the simple part numbering template below and selecting the desired PowerKey Ultimate model and features. Detailed descriptions for each of the feature and accessory offerings can be found at www.hmisystems.net

NOTE: PowerKey Ultimate requires all controlled devices be powered with a distributed communication system. If you have any questions, please contact your nearest support center found on the back of this brochure.

The diagram illustrates the part numbering template: PKU - [][] 0 0 [] - [][][]. Lines connect the boxes to the corresponding columns in the table below.

Keypad Series	Rows	Columns	Description	Size		Communications Protocol			Connector		Add-On Buttons
PKU PowerKey Ultimate	2	2	2200 - Four Position Keypad	Blank	Default	1	J1939	0	Deutsch	0	Yes (Deutsch)
	2	4	2400 - Eight Position Keypad	M	Mini	2	CANopen	1	Flying Leads	1	None
						3	RS-485	2	Molex	2	Yes (Flying Leads)
	2	6	2600 - Twelve Position Keypad			4	NMEA2000	3	M12	3	Yes (Custom)
						5	J1939 & RS-485	X	Custom		
						6	Legacy CAN (DSS PKP Style)				
						7	Application Specific Firmware				
					X	Development					

1955 West State Rd 426 | Oviedo, FL 32765 | Tel: 407.359.8171 | Fax: 407.359.8170

info@hmisystems.net | www.hmisystems.net